




THE WATER WORKS FRESH WATER DELIVERY SYSTEM

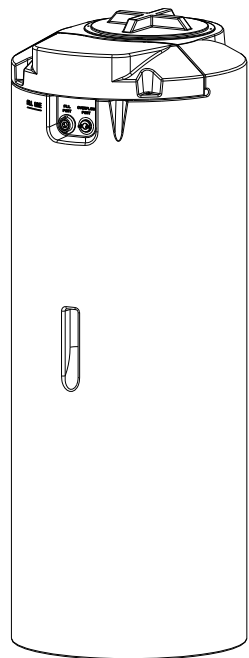

SPECIFICATIONS

Height	60 in	152 cm
Diameter	23 in	58 cm
Tank Capacity	93 gal	352 ltr
Pump	110 volt	1.5 amp
Weight Empty	46 lb	20.87 kg
Weight Full	822 lb	372.85 kg

CAUTION

DISCONNECT FROM POWER SOURCE PRIOR TO
PERFORMING ANY MAINTENANCE OR SERVICE WORK

POLYJOHN USA

PolyJohn Enterprises Corp
2500 Gaspar Ave.
Whiting, IN 46394
Phone: 800-292-1305
Fax: 219-659-0625
www.polyjohn.com
info@polyjohn.com

POLYJOHN WORLDWIDE

PolyJohn (UK) Ltd.
Equinox 1 Audby Lane
Wetherby, England LS22 7RD
Phone: 44 (0) 1937-583333
Fax: 44 (0) 1937-583322
www.polyjohn.co.uk
sales@polyjohn.co.uk

POLYJOHN CANADA

PolyJohn Canada
P.O. Box 2300
199 Forest Plain Rd.
Orillia, Ontario LV3 6S2
Phone: 800-465-9590
Fax: 705-325-8250
www.polyjohncanada.ca
info@polyjohncanada.ca

THANK YOU FOR PURCHASING POLYJOHN PRODUCTS!

Look for us on the Web @ www.PolyJohn.com

General Product Overview

This self-contained fresh water delivery system is designed to attach to existing plumbing in a temporary setting such as office trailers, portable showers, etc. and is made of tough impact resistant polyethylene. The system features an intermittent duty pump controlled with a time delay relay set to run five minutes before shutting off. It also has a water fill float valve that shuts off when the tank is full, and a (GFCI) ground fault circuit interrupter electrical plug rated at 15 amps.

Set-up Operation Information

Review the Exploded Parts Drawing

(For shipping purposes items are sent loose in the same bag as the instructions.)

- Step 1.** Remove the phillips screws from the pump cover. Remove the cover. Unwind the electrical cord. *(Do not plug in at this time).*
- Step 2.** Attach the float to the rod. Screw the float/rod assembly onto the float valve.
- Step 3.** Insert the 30" discharge tube into the fitting that is attached to the pump *(make sure the tube is pushed in until you can not push it in any further)*. Insert the other end of the tube into the loose fitting. The fitting may now be connected to a plumbing source.
- Step 4.** Replace the cover. *(Be sure the cord and hose are in their molded in channels.)*
- Step 5.** Fill the tank with fresh water. This tank can be filled by inserting a hose into the hatch or through a plumbed line. If you are using plumbed lines connect your piping to the 3/4" fresh water fill port. This port is equipped with a float shut-off valve that will "shut-off" when the tank reaches its 93 gallon capacity. Depending on the size and length of the hose, estimated fill time is 7 to 20 minutes. The overflow port should be plumbed the same way as the fresh water fill port, which will give the service operator a visual indication that the tank has reached its 93 gallon (352L) capacity.
- Step 6.** Plug the GFCI cord into a GFCI protected outlet making sure the reset button is pressed. Deplete the air from the system, either by turning on a sink and leaving on until the air is gone or flushing a toilet until water begins to flow. *(If this takes more than five minutes to complete press the reset button on the GFCI cord to reset the pump.)*

CAUTION: ELECTRICAL HAZARD - Electrical wiring to be performed by a qualified electrician, in accordance with all local codes.

Trouble Shooting Information

Pump Is Not Operating:
Check the GFCI plug - Is it completely plugged in and the reset depressed?
Check the water level.

Pump Is Not Shutting Off:
Check your plumbing connections - Are they tight so there is no air in the lines?
Check your fixtures - Is your toilet continually running?